# Honeywell | Pressure Reducing Valves

# D06F

Pressure Reducing Valve With Balanced Seat and Set Point Scale

## APPLICATION

According EN 806-2 pressure reducing valves of this type protect household water installations against excessive pressure from the supply. They can also be used for industrial or commercial applications within the range of their specification.

By installing a pressure reducing valve, pressurisation damage is avoided and water consumption is reduced.

The set pressure is also maintained constant, even when there is wide inlet pressure fluctuation.

Reduction of the operating pressure and maintaining it at a constant level minimizes flow noise in the installation.

## APPROVALS

- DVGW
- WRAS (up to 23°C)

#### **SPECIAL FEATURES**

- Inlet pressure balancing no influence on outlet pressure by fluctuating inlet pressure
- Up to size 1<sup>1</sup>/<sub>4</sub>" approved by LGA for low noise, Group 1 without limitations
- The valve insert is of high quality synthetic material and can be fully exchanged
- The outlet pressure is set by turning the adjustment knob
- The set pressure is directly indicated on the set point scale
- The adjustment spring is not in contact with the drinking water
- Integral fine filter
- Also available without fittings
- Conforms to BSEN 1567
- All materials are UBA conform
- All materials are ACS approved



## **TECHNICAL DATA**

Media	
Medium:	Drinking water
<b>Connections/Sizes</b>	
Connection sizes:	1/2" - 2"
Nominal sizes:	DN15 - DN50
Pressure values	
Max. inlet pressure with clear filter bowl:	16 bar
Max. inlet pressure with brass filter bow:	25 bar
Outlet pressure:	1.5 - 6 bar
Preset outlet pressure:	3 bar
Min. pressure drop:	1 bar
Operating temperatures	
Max. operating temperature medium with clear filter bowl:	40 °C
Max. operating temperature medium with brass filter bowl:	70 °C *
* max. operating pressure 10 bar	

Note: Use the SM06T brass filter bowl, if the valve can be exposed to UV radiation or solvent vapors.

## CONSTRUCTION



#### **METHOD OF OPERATION**

Spring loaded pressure reducing valves operate by means of a force equalising system. The force of a diaphragm operates against the force of an adjustment spring. If the outlet pressure and therefore diaphragm force fall because water is drawn, the then greater force of the spring causes the valve to open. The outlet pressure then increases until the forces between the diaphragm and the spring are equal again.

The inlet pressure has no influence in either opening or closing of the valve. Because of this, inlet pressure fluctuation does not influence the outlet pressure, thus providing inlet pressure balancing.

### TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5 °C
Max. ambient temperature:	55 °C
Min. ambient relative	25 % *
humidity:	
Max. ambient relative	85 % *
humidity:	

\*non condensing

	Components	Materials
1	Spring bonnet with adjustment knob and setting scale	High-quality synthetic material
2	Housing with pressure gauge connections on both sides	Dezincification-resistant brass
3	Threaded male connections (options A & B)	Brass
4	Pressure gauge connection	-
5	Filter bowl	Clear synthetic or brass
	Not depicted components	
	Adjustment spring	Spring steel
	Valve insert complete with diaphragm and valve seat	High-quality synthetic material, EPDM diaphragm
	Fine filter with 0.16 mm mesh	Stainless steel
	Pressure gauge (see accessories)	High-quality synthetic material
	Seals	EPDM

## **INSTALLATION GUIDELINES**

#### Setup requirements

- Install in horizontal pipework with filter bowl downwards
- Install shut-off valves
- The device downstream should be protected by means of a safety valve (installed downstream of the pressure reducing valve). In these cases the delivery pressure of the pressure reducing valve shall be set to at least 20% below the response pressure of the pressure relief-valve according to EN 806-2
- The installation location should be protected against frost and be easily accessible
  - Pressure gauge can be read off easily
  - With clear filter bowl, degree of contamination can be easily seen
  - Simplified maintenance and cleaning
- Install downstream of the filter or strainer
- Provide a straight section of pipework of at least five times the nominal valve size after the pressure reducing valve (in accordance with EN 806-2)
- Requires regular maintenance in accordance with EN 806-5

#### Installation Example

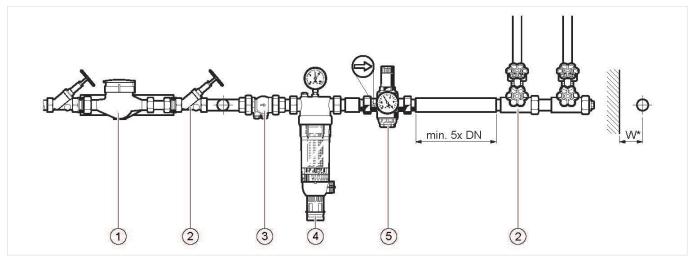


Fig. 1 Standard installation example for the pressure reducing valve

- 1 Water meter
- 2 Shut-off valve
- 3 Check valve
- 4 Filtering unit
- 5 Pressure reducing valve

Connection sizes:						
DN:	15	20	25	32	40	50
inch:	1/2"	3/4"	1"	1 <sup>1</sup> /4"	$1^{1}/_{2}$ "	2"
Distance in mm (W*):	55	60	60	60	70	70

\* Required installation distances between the centerline of the pipework and the surrounding in dependency of the connection size.


## **TECHNICAL CHARACTERISTICS**

#### kvs-Values

Connection sizes:	15	20	25	32	40	50
k <sub>vs</sub> -value (m <sup>3</sup> /h):	2.4	3.1	5.8	5.9	12.6	12.0
IfBt designation:	P-IX 1582/I	P-IX 1582/I	P-IX 1582/I	P-IX 1582/I	- *	- *
DVGW registration number:	DW-6330 AT 2314					

\* Compulsory testing in sizes R  $^{1}/_{2}$ " to R 1  $^{1}/_{4}$ 


#### **Pressure drop characteristics**

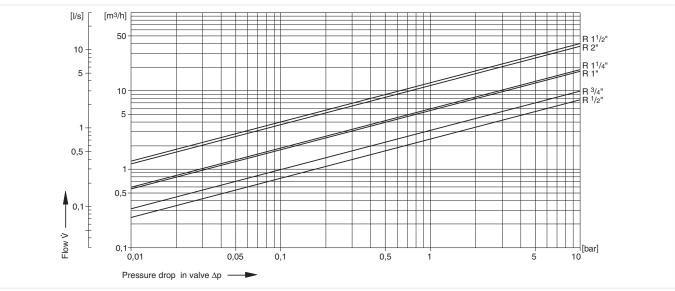



## DIMENSIONS

#### Overview

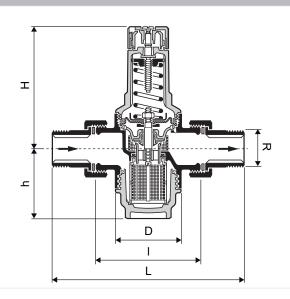

Parameter		Values					
Connection sizes:	R	<sup>1</sup> /2"	3/4"	1"	1 <sup>1</sup> /4"	$1^{1}/_{2}$ "	2"
Nominal size diameter:	DN	15	20	25	32	40	50
Weight:	kg	0.8	1.0	1.4	2.0	3.3	4.5
Dimensions:	L	140	160	180	200	225	255
	1	80	90	100	105	130	140
	Н	89	89	111	111	173	173
	h	58	58	64	64	126	126
	D	54	54	61	61	82	82

Note: All dimensions in mm unless stated otherwise.

#### **ORDERING INFORMATION**

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

#### Options

The valve is available in the following sizes: 1/2", 3/4", 1",  $1^{1}/4$ ",  $1^{1}/2$ " and 2".

standard

- not available

		D06FA	D06FB	D06FE
Max. operating	40 °C	•	-	•
temperature medium:	70 °C	-	•	-
Filter bowl:	clear	•	-	•
	brass	-	•	-
Connection type:	external threaded connection set on in- and outlet	•	•	-
	external thread on in- and outlet	-	-	•

Note: ... = space holder for connection size

Note: Ordering number example for  $1^{1}/4$ " and type A valve: D06F-11/4A

#### Accessories

$ \begin{array}{ c c c c } & \operatorname{Range: 0 - 16 \ bar} & \operatorname{M07M-A16} \\ & \operatorname{Range: 0 - 25 \ bar} & \operatorname{M07M-A25} \\ & \operatorname{M07M-A25} \\ \end{array} \\ \end{array} \\ \end{array} \\ \begin{array}{ c c c c c } & \operatorname{Range: 0 - 25 \ bar} & \operatorname{M07M-A16} \\ & \operatorname{M07M-A25} & \operatorname{M07M-A25} \\ \end{array} \\ \end{array} \\ \end{array} \\ \begin{array}{ c c c c } & \operatorname{Range: 0 - 25 \ bar} & \operatorname{M07M-A25} & M0$		Descripti	on	Dimension	Part No.		
Image: 0 - 4 bar       M07M-A4         Range: 0 - 10 bar       M07M-A10         Range: 0 - 16 bar       M07M-A16         Range: 0 - 25 bar       M07M-A25         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Image: 0 - 25 bar         Image: 0 - 25 bar       Ima		M07M	Pressure gauge				
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$			Housing diameter 63 mm, rear connection thr	ead G <sup>1</sup> /4"			
$ \left  \begin{array}{c} \operatorname{Range: 0 - 16 \text{ bar}} \\ \operatorname{Range: 0 - 25 \text{ bar}} \\ \operatorname{For removal of spring bonnet and filter bowl} \\ For removal o$	5 4 5 -2		Range: 0 - 4 bar		M07M-A4		
Range: 0 - 25 bar       M07M-425         Range: 0 - 25 bar       M07M-425         Range: 0 - 25 bar       Double ring wrench         For removal of spring bonnet and filter bowl       Image: Consection set         For removal of spring bonnet and filter bowl       Image: Consection set         M07M-425       Solder connections         M1/1/2       VST06-11/24         M07M-425       Solder connections         M1/2       VST06-11/24	24 - B - 10		Range: 0 - 10 bar		M07M-A10		
ZROGKDouble ring wrench For removal of spring bonnet and filter bowlZROGKWSTOGAConnection set Threaded connections $1/2^{\circ}$ VSTOG-1/2/4 $3/4^{\circ}$ $1/2^{\circ}$ VSTOG-1/2/4 	internet of		Range: 0 - 16 bar		M07M-A16		
Image: Series of the series			Range: 0 - 25 bar		M07M-A25		
VSTOGA         Connection set Threaded connections         1/2"         VSTOG-1/2/ 3/4"           1/2"         VSTOG-3/4/ 1"         1/4"         VSTOG-3/4/ 1"           1/4"         VSTOG-1/2/ 3/4"         1/4"         VSTOG-3/4/ 1"/4"           1/4"         VSTOG-1/2/ 3/4"         1/4"         VSTOG-1/2/ 3/4"           VSTOG         Connection set Solder connections         1/2"         VSTOG-1/2/ 3/4"           VSTOGE         VSTOG-1/2/ 4"         1/2"         VSTOG-1/2/ 3/4"           VSTOGE         Connection set Solder connections         1/2"         VSTOG-1/2/ 3/4"           1/2"         VSTOG-1/2/ 3/4"         1/2"         VSTOG-1/2/ 3/4"           1/2"         VSTOG-1/2/ 3/4"         1/2"         VSTOG-1/2/ 3/4"           1/2"         VSTOG-1/2/ 3/4"         1/2"         VSTOG-1/2/ 3/4"		ZR06K	Double ring wrench				
$ \begin{array}{ c c c c } \hline \begin{tabular}{ c c } \hline \begin{tabular}{$			For removal of spring bonnet and filter bowl				
<ul></ul>					ZR06K		
<ul></ul>							
<ul></ul>							
Image: Second	ò	VST06A	Connection set				
VST06-3/44         1"         VST06-3/44           1"         VST06-14/4         1"         VST06-14/4           11/4"         VST06-11/2         11/2"         VST06-11/2           2"         VST06-11/2         2"         VST06-24           VST06         Solder connections         1/2"         VST06-11/2           3/4"         VST06-11/2         1/2"         VST06-12/2           3/4"         VST06-11/2         1/2"         VST06-11/2           1"         VST06-11/2         1/4"         VST06-11/2           11/4"         VST06-11/2         1/4"         VST06-11/2           11/4"         VST06-11/2         1/2"         VST06-11/2			Threaded connections				
VST06-14/4         1"         VST06-14/4         11/4"         VST06-11/4         11/2"         VST06-11/4         11/4"         VST06-11/4         11/4"         VST06-11/4         11/4"         VST06-11/4         11/4"         VST06-11/4         11/2"         VST06-11/4         11/4"         11/4"         VST06-11/4 <th></th> <th></th> <td></td> <td>1/2"</td> <td>VST06-1/2A</td>				1/2"	VST06-1/2A		
VST06B         Connection set         1/2"         VST06-11/2           Solder connections         1/2"         VST06-11/2           1/2"         VST06-2A         1/2"           1/2"         VST06-11/2         1/2"           1/2"         VST06-11/2         1/2"           1/2"         VST06-11/2         1/2"           1/2"         VST06-11/2         1/2"           1/4"         VST06-11/2         1/2"           1/4"         VST06-11/2         1/2"           1/4"         VST06-11/2         1/2"				3/4"	VST06-3/4A		
VST06B         Connection set Solder connections         1/2"         VST06-11/2           1/2"         VST06-2A         VST06-2A         VST06-2A           1/2"         VST06-11/2         VST06-11/2           1/2"         VST06-11/2         VST06-11/2           1/4"         VST06-11/2         VST06-11/2           1/2"         VST06-11/2         1/2"					VST06-1A		
VST06B         Connection set Solder connections         1/2"         VST06-1/2E <sup>1/2</sup> "         VST06-1/2E <sup>1/4</sup> "         VST06-11/4 <sup>1/4</sup> "         VST06-11/4 <sup>1/4</sup> "         VST06-11/4					VST06-11/4A		
VSTO6B         Connection set Solder connections         1/2"         VSTO6-1/2E           3/4"         VSTO6-3/4E           1"         VSTO6-11/4E           1/4"         VSTO6-11/4E           1/4"         VSTO6-11/4E           1/4"         VSTO6-11/4E           1/4"         VSTO6-11/4E           1/4"         VSTO6-11/4E				$1^{1}/2^{"}$	VST06-11/2A		
Solder connections         1/2"         VST06-1/28           3/4"         VST06-3/48           1"         VST06-11/4           1'/4"         VST06-11/4           1'/2"         VST06-11/4				2"	VST06-2A		
1/2"         VST06-1/2E           3/4"         VST06-3/4E           1"         VST06-1B           11/4"         VST06-11/4           11/2"         VST06-11/4		VST06B	Connection set				
3/4" VST06-3/4E 1" VST06-1B 1 <sup>1</sup> /4" VST06-11/4 1 <sup>1</sup> /2" VST06-11/4			Solder connections				
1" VST06-1B 1 <sup>1</sup> /4" VST06-11/2 1 <sup>1</sup> /2" VST06-11/2				-	VST06-1/2B		
1 <sup>1</sup> /4" VST06-11/4 1 <sup>1</sup> /2" VST06-11/2					VST06-3/4B		
1 <sup>1</sup> /2" VST06-11/2							
					VST06-11/4B		
2" VST06-2B					VST06-11/2B		
				2"	VST06-2B		

#### **Spare Parts**

Pressure Reducing Valve D06F, from 1997 onwards

Overview		Description	Dimension	Part No.
	1	Spring bonnet comp	lete	
			1/2" - 1"	0901515
			$1" + 1^{1}/4"$	0901516
			$1^{1}/_{2}$ " + 2"	0901518
	2	Valve insert complet	e (without filter)	
			$\frac{1}{2} + \frac{3}{4}$	D06FA-1/2
			1" + 1/4"	DO6FA-1B
			$1^{1}/_{2}" + 2"$	D06FA-11/2
	3	Union seal washer (2	LO pcs.)	
			1/2"	0901443
			3/4"	0901444
			1"	0901445
			$1^{1}/4^{"}$	0901446
			$1^{1}/2^{"}$	0901447
			2"	0901448
	4	5		
			1/2" + 3/4"	0901246
			$1" + 1^{1}/4"$	0901499
			$1^{1}/_{2}$ " + 2"	0901248
	5			
			1/2" + 3/4"	SK06T-1/2
			$1" + 1^{1}/4"$	SKO6T-1B
			$1^{1}/_{2}$ " + 2"	SK06T-11/2
	6	Brass filter bowl wit		
			1/2" + 3/4"	SM06T-1/2
(5)(6) (4)			$1" + 1^{1}/_{4}"$	SM06T-1B
			$1^{1}/2" + 2"$	SM06T-11/2
	7	Replacement filter i		
			1/2" + 3/4"	ES06F-1/2A
			$1" + 1^{1}/4"$	ESO6F-1B
			$1^{1}/2" + 2"$	ES06F-11/2A
	8	Blanking plug with (	D-ring R <sup>1</sup> /4" (5 pc	:s.)
			1/2" - 2"	S06K-1/4





Tel.: 93 454 20 06 Fax: 93 323 70 59 iac@instauto.com www.instauto.com



Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Z.A. La Pièce 16, 1180 Rolle, Switzerland by its Authorised Representative Honeywell GmbH ENOH-1002GE23 R0117 Subject to change © 2017 Honeywell GmbH

## Honeywell